



# Installing a Blow Off Backdraft On An Existing Table End

When ordering a BOB (blow off backdraft) unit you will get a new top for your machine. It will have holes like seen below. Pictured below is an end BOB unit it can mount on either end. It will be shipped with a split top, instructions for that is on the video that can be seen with the QR code below directing to the video on the web site showing how the split top is to be assembled.

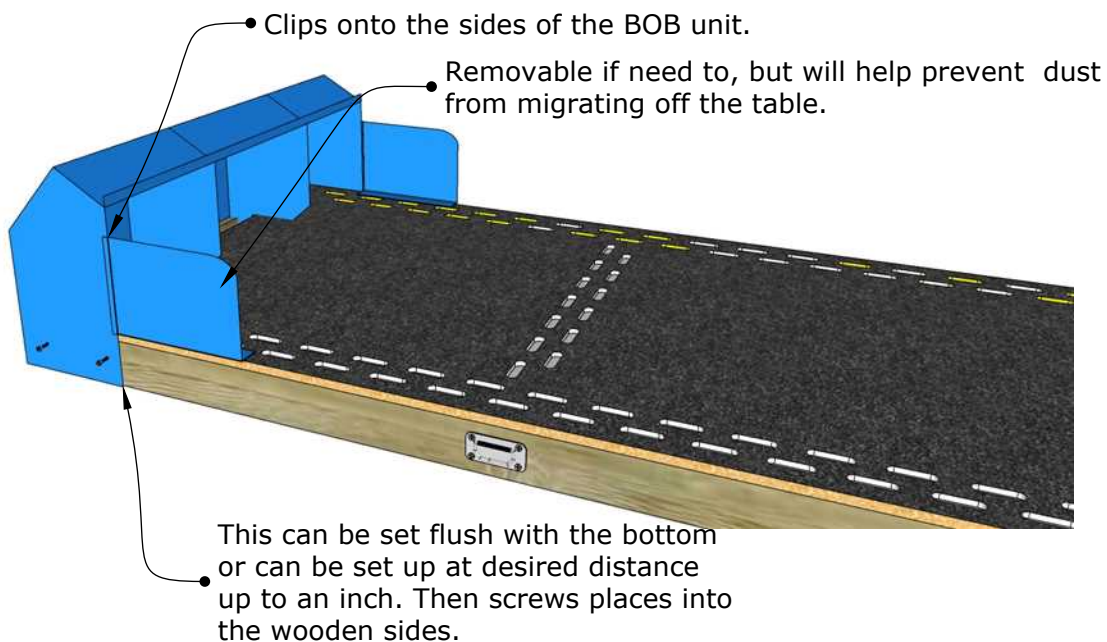

Scan to Watch  
How to Assemble  
a Split Top

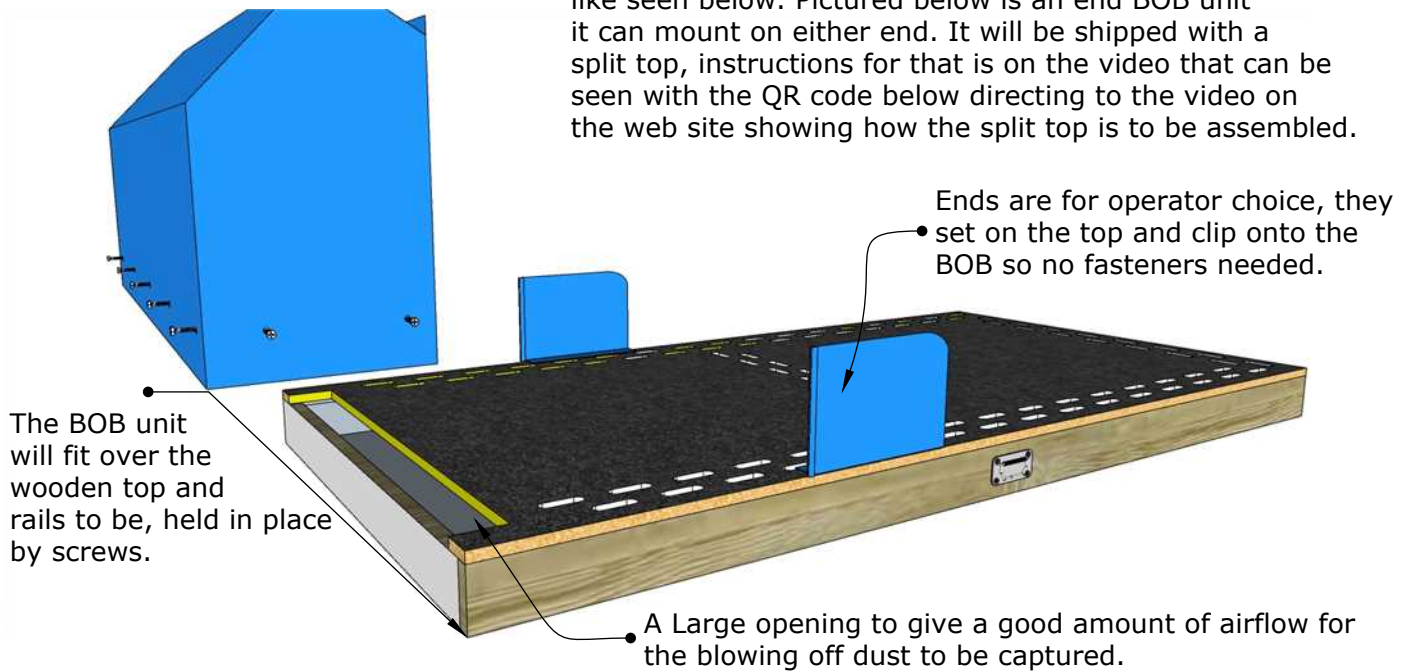

Scan to Visit Denray's  
Document Library